

RECOVERY.M8

BRUGERVEJLEDNING

 
USER MANUAL




Tak fordi du handlede hos os!
Thank you for shopping with us!

VENLIG PÅMINDELSE

• Opsætningsguide

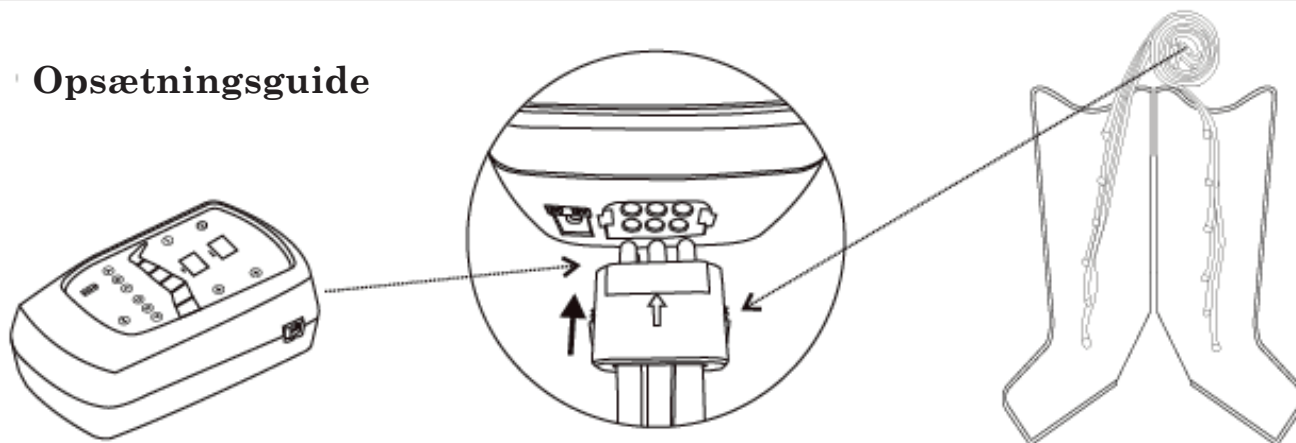

 - Sørg for at trykke på begge sider af stikket, når du vil trække stikket ud af pumpen. Træk IKKE i slangerne!
- Undlad at skille slangerne fra støvlerne hver gang de har været i brug. Dette vil slide unødigt på stik/slanger. Når du skal skille dem ad, så træk i selve stikket og IKKE i slangerne!

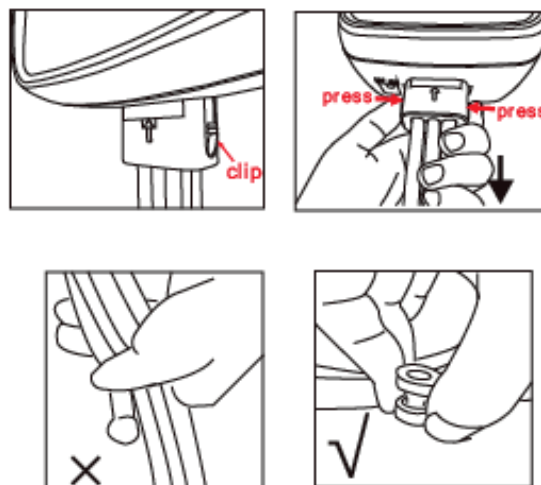

RENGØRING OG VEDLIGEHOLDELSE

- Sluk pumpen inden nogen form for rengøring
- Vask ikke pumpen eller støvler med vand
- Brug en fugtig klud til rengøring af pumpe og støvler
- Opbevares rent og tørt
- Beskyt pumpen fra direkte sollys og andre ekstreme varmekilder

ADVARSLER

- Lyn ikke støvlerne op mens pumpen er tændt
- Sluk helt for strømmen inden du lyner støvlerne op
- Udsæt ikke pumpen for væske af nogen form
- Sørg for at pumpen står på en flad overflade
- Undlad at justere på støvlerne mens pumpen er tændt
- Pumpen må ikke repareres, vedligeholdes eller rengøres når den er tændt
- Dette produkt må ikke bruges i følgende situationer(ikke begrænset til), uden samtykke fra din læge. Akut inflammatoriske hudsygdomme, arytmi, erysipelas, dyb venetrombose(DVT), lungeødem, ukontrolleret hypertension, patienter med pacemaker.

PUMPE SPECIFIKATIONER

Størrelse: 245mm*150mm*90mm

Strømforbrug: 35W

Lade input: AC 110V~240V 50hz~60Hz

Lade output: DC12.6V; 2A

Tryk: 30~240mmHg (± 30 mmHG)

HURTIG START GUIDE

- Inden brug. Kontroller batteriniveauet på pumpen, ved at trykke på den grønne knap. Hvis den ikke starter, så tilslut den medfølgende oplader.



Brug den originale oplader, eller en tilsvarende oplader med output på DC 12.6V 2A når du lader op. Da du ellers kan skade pumpen!



- Forbind slangerne til støvlerne
- Forbind luftstikket til pumpen
- Tag støvlerne på, så de sidder behageligt
- Tryk på tænd-knappen for at starte pumpen i "standby mode". Bemærk at knappen sidder på højre side af pumpen.



- Vælg det ønskede tryk ved at trykke på . Bemærk: standard er level 8 (85mmHg)
1~4 30~75mmHg 5~8 85~130mmHg
9~12 140~185mmHg 10~16 195~240mmHg



- Vælg den ønskede tid ved tryk på . Bemærk: Vælg fra 5~99 min. Standard er 30 min. Kort tryk for at reducere/øge med et minut ad gangen. Hold nede for at reducere/øge hurtigere. Når tiden er gået, slukker pumpen automatisk.



- Vælg de ønskede områder, ved at trykke på området. Bemærk: Alle 6 områder er aktiveret som standard. Pumpen skal være pauset for at du kan aktivere/deaktivere et område.

 


- Vælg det ønskede program ved at trykke på knap . Bemærk: A er standard.

- Tryk på start/pause knap for at starte eller pause pumpen.

6 FORSKELLIGE PROGRAMMER

- A** I dette program fyldes kun et enkelt kammer ad gangen. Startende fra kammer 1 -> 2 -> 3 -> 4 -> 5 -> 6. Herefter gentages programmet.
- B** I dette program fyldes et kammer ad gangen, indtil alle 6 kamre til sidst er fyldt på samme tid. Herefter gentages programmet.
- C** I dette program fyldes/tømmes alle 6 kamre samtidig. Herefter gentages programmet.
- D** I dette program fyldes kammer 1, og derefter kammer 2. Herefter tømmes kammer 1 og kammer 3 fyldes. På denne måde vil der altid være 2 sammenhængende kamre fyldt. Dette gøres hele vejen til kammer 6. Herefter gentages programmet.
- E** I dette program fyldes kammer 1, og derefter kammer 2 og 3. Herefter tømmes kammer 1 og kammer 4 fyldes. På denne måde vil der altid være 3 sammenhængende kamre fyldt. Dette gøres hele vejen til kammer 6. Herefter gentages programmet.
- F** I dette program fyldes kammer 1 til det ønskede tryk, pulserer og holder trykket. Herefter fyldes kammer 2 og pulserer imens tryk i kammer 1 holdes. Kammer 3 fyldes og pulserer, imens tryk i både 1 og 2 holdes. Herefter slippes trykket i kammer 1 imens kammer 4 fyldes. På denne måde vil der altid være 3 sammenhængende kamre fyldt ad gangen. Dette gøres hele vejen til kammer 6. Herefter gentages programmet.

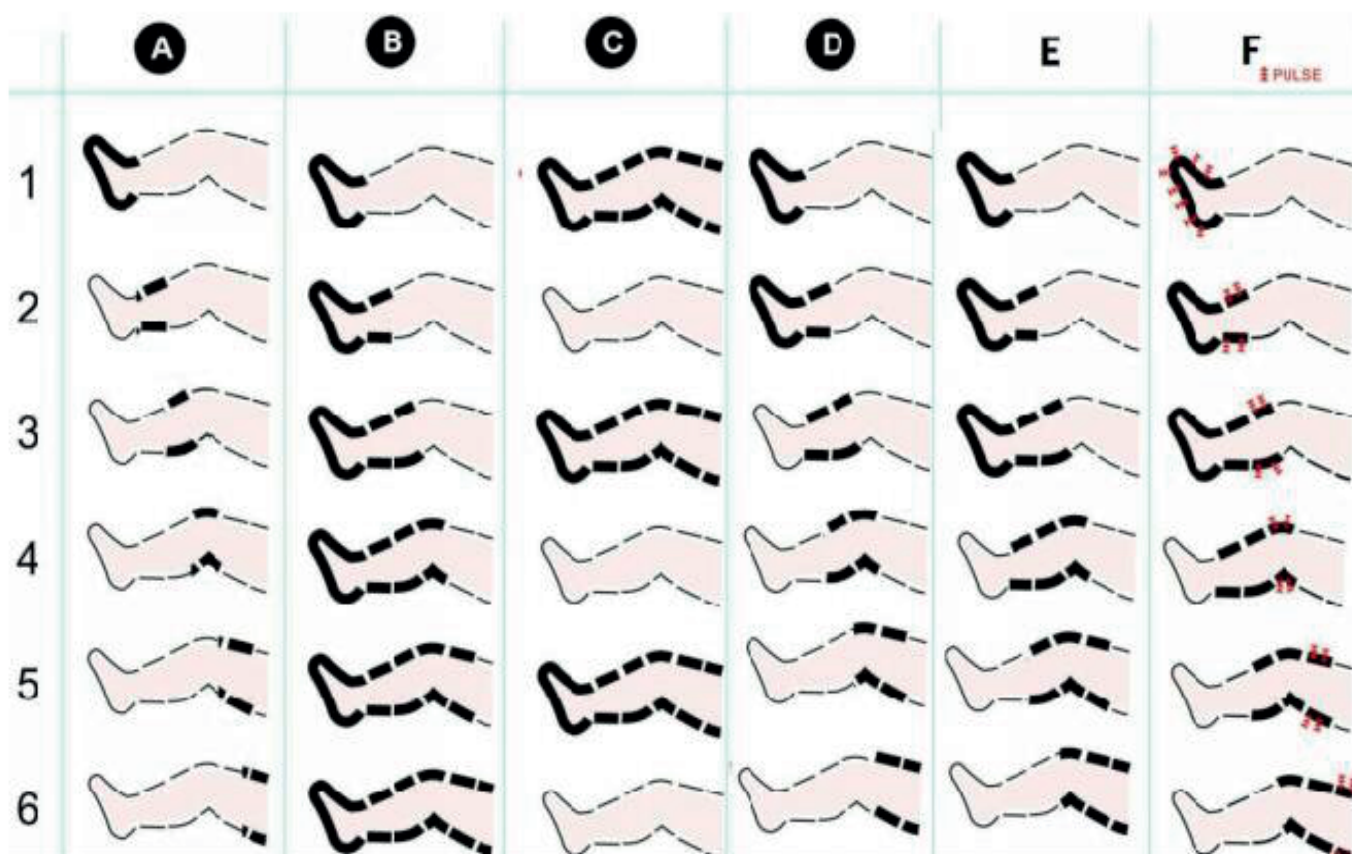

GARANTI

Der er fuld garanti på produktet. Dette frafalder dog bl.a. hvis:

1. Produktet har taget skade som følge af uansvarlig brug eller opbevaring.
2. Produktet har været skilt ad.
3. Vejledningen om brug og rengøring her i manualen ikke er blevet fulgt.
4. Manglende bevis for købet af produktet (faktura).

WARRANTY

 
There is a full warranty on the product. However, this can be waived if:

1. The product has been damaged as a result of irresponsible use or storage.
2. The product has been disassembled.
3. The instructions for use and cleaning in this manual have not been followed.
4. Lack of proof of purchase of the product (invoice).




GENTLE REMINDER

- Setup guide

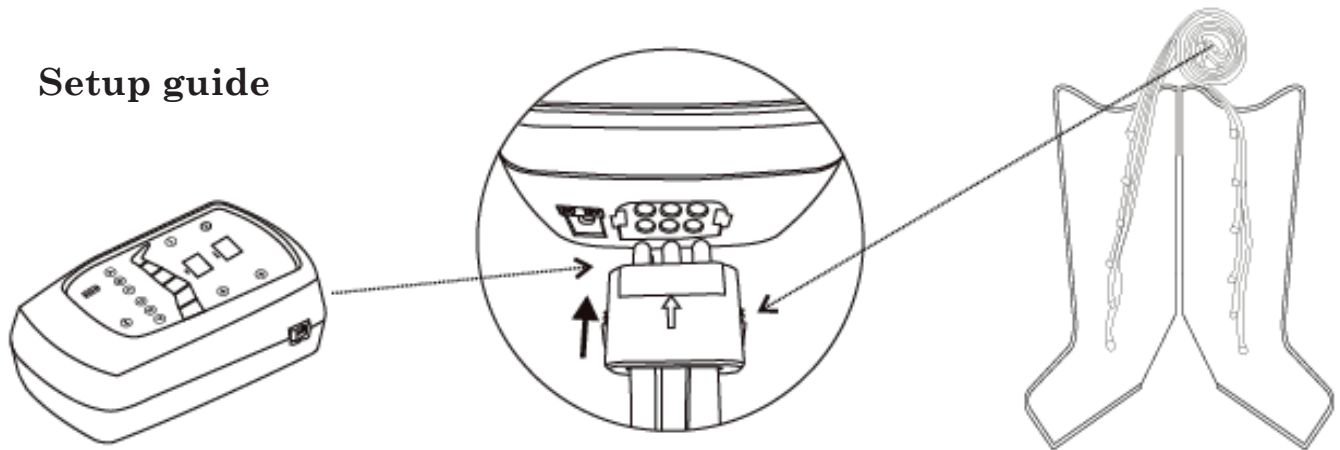

 - Be sure to press on both sides of the plug when you want to unplug the pump. **DO NOT** pull on the hoses!

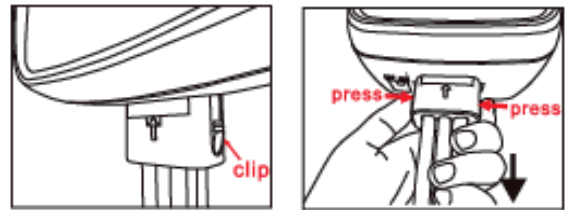

- Do not separate the hoses from the boots every time they have been in use. This will tear unnecessarily on pins / hoses. When you need to disassemble them, pull the pins and **NOT** the hoses directly!



CLEANING AND MAINTENANCE

- Switch off the pump before cleaning
- Do not wash the pump or boots with water
- Use a damp cloth to clean the pump and boots
- Store clean and dry
- Protect the pump from direct sunlight and other extreme heat sources

WARNINGS

- Do not unzip the boots while the pump is operating
- Turn off the power completely before unzipping the boots
- Do not expose the pump to any liquid
- Make sure the pump is on a flat surface
- Do not adjust the boots while the pump is operating
- The pump must not be repaired, maintained or cleaned when it is switched on
- This product must not be used in the following situations (not limited to), without the consent of your doctor. Acute inflammatory skin diseases, arrhythmia, erysipelas, deep vein thrombosis (DVT), pulmonary edema, uncontrolled hypertension, patients with pacemakers.

PUMP SPECIFICATION

Size: 245mm * 150mm * 90mm

Power consumption: 35W

Charging input: AC 110V ~ 240V 50hz ~ 60Hz

Charging output: DC12.6V; 2A

 
Pressure range: 30 ~ 240mmHg (± 30 mmHG)

QUICK START GUIDE

- Before use. Check the battery level of the pump, by pressing the green button. If it does not start, then connect the supplied charger.



Use the original charger or a similar charger output of DC 12.6V 2A when charging. Otherwise you might damage the pump!

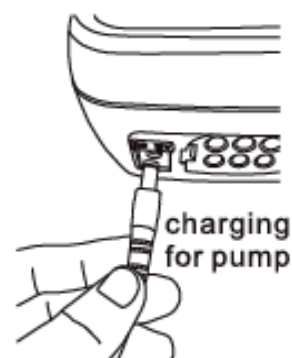

- Securely connect air hoses to the boots
- Securely connect main plug of air hose to the pump
- Put on boots comfortably
- Press the ON-button to start the pump in "Standby mode". Note: The button is on right side of the pump.



- Select the desired pressure by pressing  
Note: standard is level 8 (85mmHg)
1 ~ 4 30 ~ 75mmHg 5 ~ 8 85 ~ 130mmHg
9 ~ 12 140 ~ 185mmHg 10 ~ 16 195 ~ 240mmHg



- Select desired time by pressing  
Note: Select from 5 ~ 99 min. Default is 30 min.
Short press to decrease / increase by one minute.
Hold down to decrease / increase faster.
When time runs out, the pump switches off automatically.



- Select the desired areas by pressing the area.
Note: All 6 areas are activated by default.
The pump must be paused for you to enable / disable an area.



- Select the desired program by pressing the buttons      
Note: A is the default.

- Press start / pause button  to start or pause the pump.

MESSAGE MODES:SIX TYPES

- A** In this program, only a single chamber is inflated at a time. Starting from chamber 1 -> 2 -> 3 -> 4 -> 5 -> 6. Cycle repeats.
- B** In this program, one chamber is inflated at a time until all 6 chambers are inflated at the same time. Cycle repeats.
- C** In this program, all 6 chambers inflates / deflates together. Cycle repeats.
- D** In this program, chamber 1 inflates, and then chamber 2. Chamber 1 deflates and chamber 3 inflates. This repeats all the way to chamber 6. 2 chambers will be inflated next to each other. Cycle repeats.
- E** In this program, chamber 1 inflates, and then chamber 2 and 3. Then chamber 1 deflates and chamber 4 inflates. This repeats all the way to chamber 6. 3 chambers will be inflated next to each other. Cycle repeats.
- F** In this program, chamber 1 inflates to the desired pressure, pulses and keeps the pressure. Then chamber 2 inflates and pulses while pressure in chamber 1 is maintained. Chamber 3 inflates and pulses, while pressure in both chamber 1 and 2 is maintained. Then chamber 1 deflates while chamber 4 inflates and pulses. This repeats all the way to chamber 6. 3 chambers will be inflated next to each other. Cycle repeats.

